Model 30 / 100 Direct Fired Oil Heater



Operating Instructions & Safety Guide



0800 211 611 andrews-sykes.com

General Safety

- This equipment should only be used by a competent person who has read and understood these instructions.
- Check condition of equipment before use. If unit is showing any signs of damage contact your supplier immediately.
- Direct fired oil heaters have a naked flame, do not position heater in close proximity to any combustible materials.
- Never operate this equipment if you are ill, feeling tired or under the influence of alcohol or drugs.
- Do not use in wet or damp conditions.
- Keep all vents and grills clear of obstructions.
- Keep children and animals away from industrial heaters
- Never leave them alone in room where the units in use.
- Make sure equipment is switched off and unplugged after

Electrical Safety

- This unit requires a 230 volt electrical supply and plugs into standard domestic 13 amp socket.
- Always inspect plugs and power cables for damage before plugging into power supply.
- DO NOT USE IF ANY DAMAGE IS FOUND.
- Ensure cables are installed to prevent hazards.
- If an extension lead is used, ensure it is of the correct standard and fully uncoiled before use.
- Cables must not be laid in wet or damp areas.
- Do not move equipment while operating.
- Do not pull equipment by the power lead.
- It is recommended that the electrical supply to this equipment is protected by an RCD.

Getting started and operation

Fig 1

Position equipment on level ground;

Fill with clean fuel (38 sec Gas Oil or 28 sec Kerosene)

Fig 2

Connect to 230 volt electrical supply

Fig 3

Turn on heater by moving rocker switch to position 1

Switch off heater by moving rocker switch to position 0. Disconnect from electrical suplly when not in use.





